	8	7	6	5	➡ 4		3	· · · · · · · · · · · · · · · · · · ·
	Primary Air-to-Ground Wireless Video Wiring Diagram, PM-E1001		5.8 GHz	Video Receive, Select, and Stream Wiring Diagram, PM-E1005		Video Select Switch		
D	Jumper	composite video out					Video-to-US	BU
	point of view (POV)		Video	Video receiver vide	DVR and video video	- 1	converter	
	Remote PTZ, refer to dwg PM-E1005							
	rooftop camera		video control line		DVR and video monitor	2		
		PTZ unit	433 MHz	PTZ control unit				
	UHF Wireless Video Wiring [Panasonic TV vide				
		camcorder with video/audio ham callsign overlay	modulator on catv Ch59	Panasonic TV vide tuner on catv 59	DVR and video	- 3		
			viev Parachu	w of camera on	DVR and video			
				ations wall	monitor	- 4		
				loose audio microphone mixer				
C	I-Gate Station Wiring Diagram, PM-E1003							
	Wi-fi to hotspot							
	Yaseu VX-5, 144.330 MHz spkr audio Argent Data OT+ serial data serial data Tripplite Keyspan USB Laptop sending APRS data to internet							
	GPS/PulseOx to APRS Transmitter Wiring Diagram, PM-E1006 144.330 MHz							
	Latitude, Longitude,	GPS serial data PE Lin	k Module, T3-301 combination of	$\bigvee \longrightarrow \bigvee$	2-meter receiver audio out	Packet TNC	RS232 data	
	Altitude Heart rate (pulse),		com FC-301/D VHF data radio		for APRS		Serial-to-U converte	
	Blood O2 saturation	Oximeter serial data					packet data recorder	
в	Weather Station Wiring Dia		V	0 MHz			Laptop to display	F
	wind speed, wind direction, temperature, humidity, and barometric pressure	ADS-WS1 packet data APRS weather station	UHF handheld on lowpower	for APRS weather date	audio Packet RS232 Serial-to- out TNC conver		wind speed and direction with temperature	
	Jumper 2-Way Radio Com	munications Wiring Diagram, PM-E1008		146.430 MHz				
	QSO air-to-ground		2meter transceiver handheld	- Y	2meter transceiver mobile			F
		earpiece	(chest mount)	446.075 MHz	set as base unit			F
	Jumper UHF monitor	earpiece audio	UHF transceiver handheld/receive only (chest mount)	Y	dualband transceiver mobile set as base unit			
A	Jumper 20-meter HF Com	munications Wiring Diagram, PM-E1009	trailing end fed	14250 KHz USB				F
	Global QSO air-to-ground	mic and PTT audio/ptt audio	Yaesu FT817 HF all-mode	- ¥	20meter HF radio QSOs	9		\square
	-	V Camera Wiring Diagram, PM-E1010	145.50	0 MHz				-
		SSTV camera audio			audio Signalink USB Laptop to c			
					out USB SSTV im	ages	NEXT ASSY USE ON	+
		Γ	Ι	Γ	•		APPLICATION	Т
	8	7	6	5	▲ 4		3	

